


# How to Reset Single Color Remote Control

## Controller Box with Wire Leads

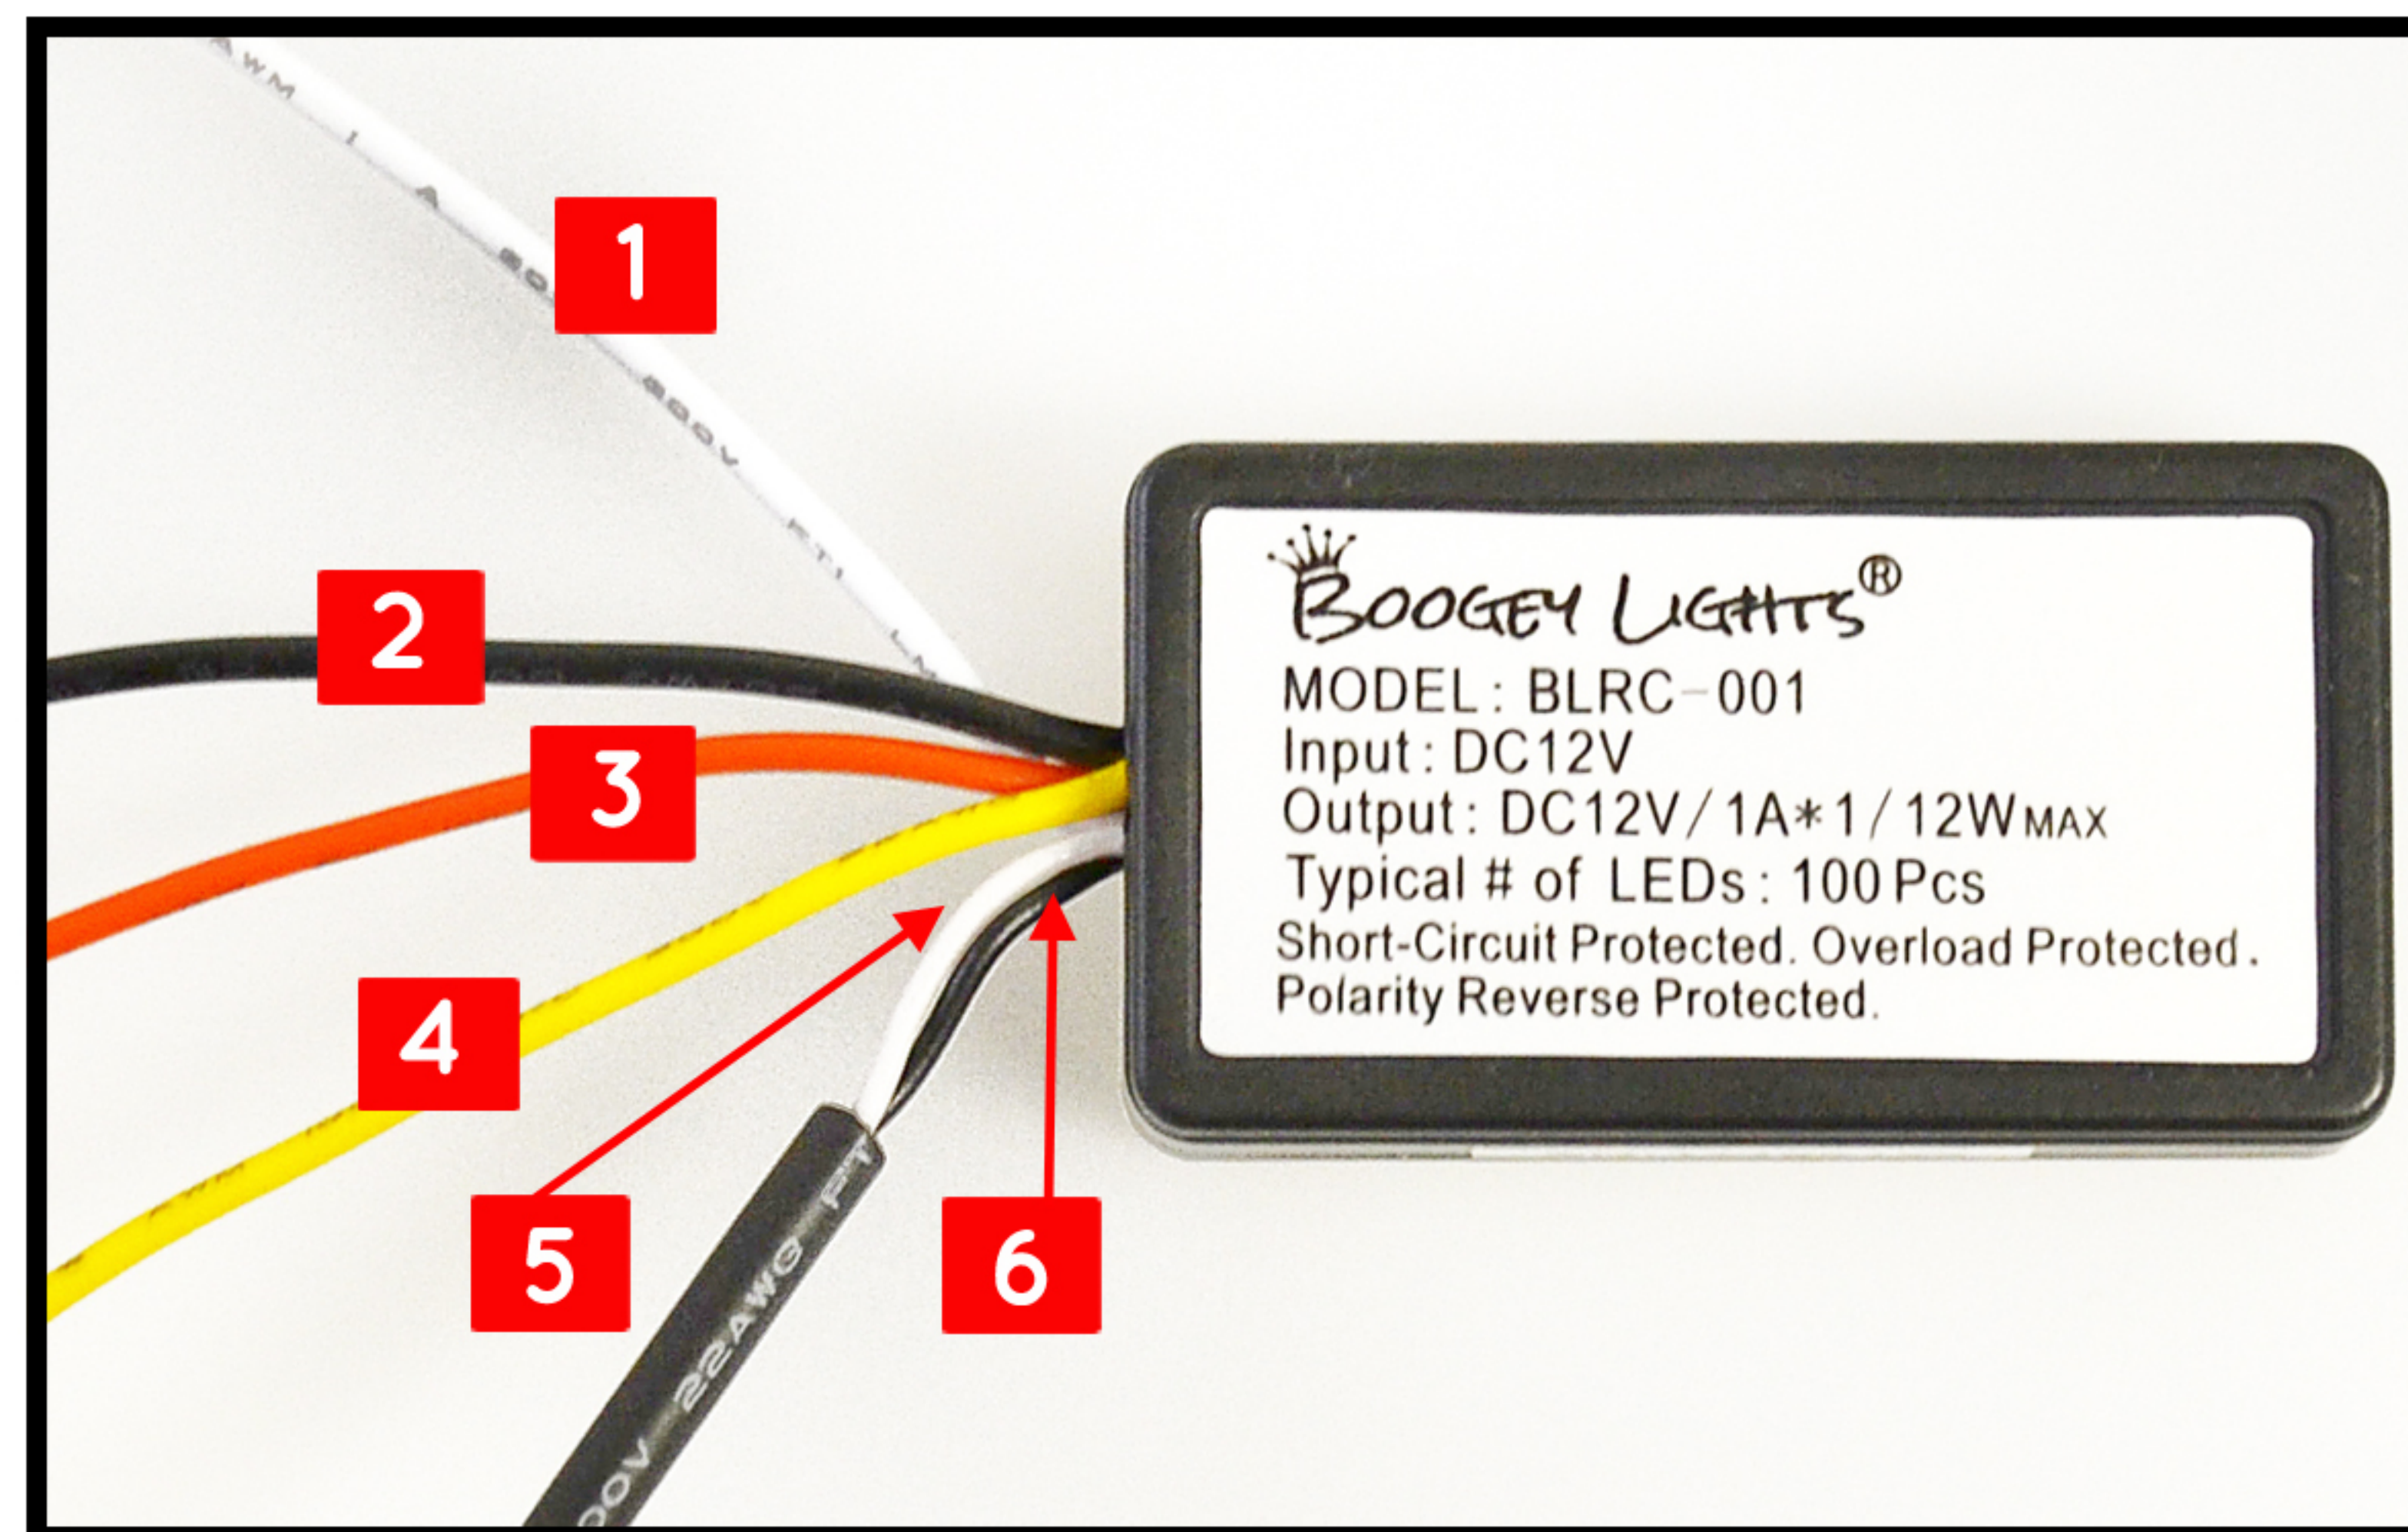

## Controller Lead Key

(1): White Wire - Connects to 12vdc positive terminal

(2): Black Wire - Ground wire connects through pushbutton switch to negative terminal

(3): Orange Wire - Pairing wire to reset remote if needed

(4): Yellow Wire - Antenna Wire

The following wires are grouped together in the black loom casing:

(5): White Wire - To red wire on light strips

(6): Black Wire - To black wire on light strips

## Step-By-Step Directions

Typically, your controller and remotes will stay paired. In the event they don't, follow these steps to reconnect them:

**Step 1:** Strip a short amount of insulation from the orange (#3) wire.

**Step 2:** Short out the orange wire by touching to the negative terminal of your power source. Within 10 seconds press any button on the remote FOB. Wait 3-4 seconds for the code pairing process.

**Step 3:** Press each button to test the various functions. If all works properly then you are all set. If not repeat step 2 and 3.

**Step 4:** To pair a second remote repeat steps 2 and 3 above.

## Notes:

If you fail to push any button within 10 seconds it will exit pairing mode.

One controller can pair with 2 - remote FOBs. If you attempt to pair with more than 2 the controller will cancel out the first paired

## Remote Control FOB



## Boogey Lights - Boogey, Inc

7505 Sussex Drive Suite 114, Florence, KY, 41042  
www.boogey.com Phone: 800.846.1382