

RV AWNING LED Light Kit Wiring Diagram

RGBW Light Strip with RGBWW Wireless RF Controller

This light kit uses our Heavy Duty RGBWW LED controller to power the RGBW LED light strip. Twist the GRAY and WHITE power output wires coming from the LED Controller together and connect them to the WHITE wire on the RGBW LED strip. The RED, GREEN and BLUE wires connect to their respective colors. BLACK = ground wire.



RGBWW RF M7 Remote (Long Range)



Optional 120/110vac Power Converter



120/110VAC APPLICATIONS

If you are using the optional 110VAC power adapter instead of 12vdc power, you would connect the POSITIVE wire coming from the 110VAC power adapter to the POSITIVE wire of the controller. Connect the NEGATIVE wire coming from the 110VAC power adapter to the black wire of the controller (which is the ground wire). Then, plug in the 110VAC power adapter cable into your 110VAC power source.

* Yellow antenna wire may not be present in all RF models.

[BLRVWD-RGBW-RGBWW-081023]

800.847.1359



Lighting Bikes Since 1989!

www.BoogeyLights.com